

HÈMÈRA

PRODUCT CARE

Acrylic and frosted acrylic:

Clean using a damp cloth with mild soap and water. Avoid heavy-duty cleaners as they can damage the acrylic. Do not use ammonia cleaning agent.

Resin and Encapsulated linen or fabric:

Remove dust and dirt from Ecoresin with a soft cloth or chamois and a solution of soap and/or liquid detergent in warm water. A 50/50 solution of isopropyl alcohol and water also works well. Avoid using liquid cleaners around edges or holes where the cleaner can wick into the interlayer. You can also clean with Windex, Formula 409, Simple Green, Fantastik or 10:1 Water/Bleach solution

Tri-lam vinyl coated:

Clean using damp cloth with mild soap and water. Dry surface after cleaning. Avoid using liquid cleaners around the edges where cleaner can wick into interlayer.

Oyster white linen and cream linen bruxell:

To clean linen, use a duster or compressed air to dust off dirt particles. Do not use water or vacuum on linen.

Wood finish:

Wood surfaces should be cleaned with a damp cloth. Do not use abrasif pad or solvent base cleaner.

HÈMÈRA

PRODUCT CARE

Metal finish:

Clean with damp cloth and soap. Do not use abrasive cleaners which may cause finish to change.

Glass:

Remove glass shade from lighting fixture (when possible). Wash using a soft cloth or soft sponge with a mix of water and detergent in a container or sink. Do not use any abrasive cloth or cleaner.